


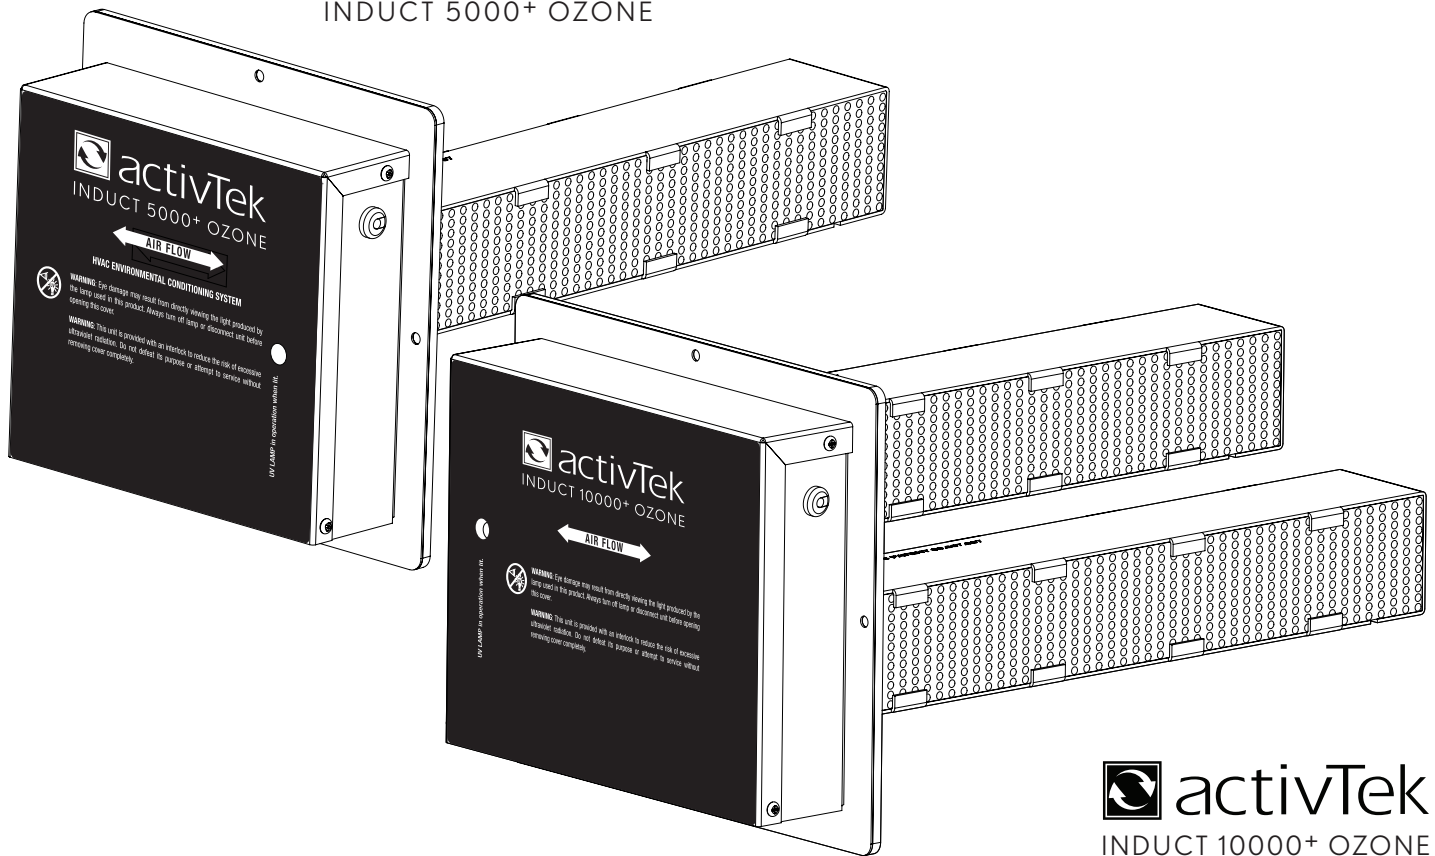

Duct Mounted Air Purification Systems

Read manual carefully for proper use and optimal operation.

General Information

Product Overview

Congratulations on your purchase of the activTek Induct 5000+ Ozone or 10000+ Ozone air purification enhancement system! The unit is easily mounted into the supply side of air conditioning and heating system air ducts by an electrician or HVAC professional, where it will provide around-the-clock air purification while the HVAC system is running. Please read and follow all safety warnings and instructions outlined in this manual before installing or performing maintenance.

Contents

Product Overview	2
Specifications	2
Storage and Disposal	2
Important Safety Instructions	3
Product Features	4
Installation Hardware (Supplied)	4
Recommended Installation Tools	4
Directions for Use and Installation Requirements	5
Electrical Requirements	6
Installing the Unit	6
Wiring the Unit	9
Maintenance/PCO-A Cell Indicator	10
Replacing the PCO-A Cell Assembly	10
Replacing the Ballast	12
Troubleshooting	15
Replacement Parts	16
Warranty Information	17
FCC Declaration & Responsible Party	18

Specifications

activTek Induct 5000+ Ozone activTek Induct 10000+ Ozone

- Sales Number: US40536 • Sales Number: US40537
- Model Number: A1024C • Model Number: A1025C

These products DO NOT meet California requirements and cannot be shipped to California or Canada

Technology

- PCO-A (Photocatalytic Oxidation-Advanced) Technology
 - (1) HO 14" Cell Assembly (5000+)
 - (2) HO 14" Cell Assemblies (10000+)
- Ozone (O₃)

Electrical

- Input Voltage: 100 - 277 VAC; 50/60 HZ
- Current: .30 Amps (5000+), .54 Amps (10000+)
- Power: 20 Watts (5000+), 37 Watts (10000+)

Mechanical

- Distribution via Air Handler
- Safety Switch Installed

Weight & Dimensions

- 4 lbs (5000+), 8 lbs (10000+)
- 8.1" H x 8.1" W x 2.4" D (5000+)
- 8.6" H x 9.8" W x 2.4" D (10000+)

Cell Dimensions

- 2.3" H x 2.3" W x 14.6" D (5000+)
- 2.3" H x 2.3" W x 14.9" D (10000+)

Operating Temperature

- 34°F to 200°F

Coverage

- activTek Induct 5000+ Ozone
 - Residential not to exceed 3,500 sq. ft.; High Density Commercial not to exceed 1,250 sq. ft.¹
- activTek Induct 10000+ Ozone
 - Residential not to exceed 5,000 sq. ft.; High Density Commercial not to exceed 2,500 sq. ft.¹

Warranty

- Limited 5 Year Warranty
- Terms and conditions may apply

We reserve the right to change or modify any specification without notice.

¹ Recommended ceiling height to not exceed 10 ft. Solutions should be customized based upon a variety of factors including HVAC system capabilities and settings, air flows taking into account walls, air pressure, and doors, ambient air temperatures and humidities, variable occupant density, known VOC concentrations, and other layers of protection.

Fill In and Save

Record information regarding your new activTek Induct 5000+ Ozone or 10000+ Ozone here. Retain for future reference.

Model No. _____ Serial No. _____ Date of Purchase _____

Name: _____ Phone No. _____

Address: _____

Sales Representative: _____

Storage and Disposal

Do not dispose of this product as household waste. Electrical waste and electronic products should be appropriately recycled as required by practices established by your local authority.

EPA Est.
87327-VA-1

RoHS
COMPLIANT



If you have any questions regarding the use of this product, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

Important Safety Instructions



WARNING

- UV Light in operation; **DO NOT** operate unless the unit is completely and correctly assembled; failure to follow warnings may result in severe eye damage and electrical shock
- To prevent damage to the unit, operating environment temperature must never exceed 200°F (93°C)
- This unit is equipped with a universal ballast that operates at nominal voltages between 100 and 277 VAC, 50/60 Hz
- To Reduce the Risk of Electric Shock – **DO NOT** use in wet or damp locations; this equipment emits UV-C radiation; **DO NOT** locate equipment in any location allowing direct line-of-sight to vents, returns, or other duct openings
- **DO NOT** use this unit with an extension cord



CAUTION

- Wiring and installation of this unit must be done by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- When the unit is installed in a roof mounted HVAC system, the unit must be protected from the elements
- The activTek Induct 5000+ Ozone and activTek Induct 10000+ Ozone require power 24/7; **DO NOT** install where power to the unit will be cycled on and off



Location for Protective Earth Line.


Read this manual in its entirety before using your activTek Induct 5000+ Ozone or activTek Induct 10000+ Ozone. Keep out of the reach of children.

- Live voltage may be present
- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA lockout procedures to prevent accidental exposure to electrical energy
- If installed near a furnace or where emergency heat coils could raise the temperature inside the plenum, cycle the AC unit through the heating cycles assuring that the temperature never exceeds 200°F (93°C); the PCO-A Cell Assembly must not exceed 200°F (93 °C)
- If the unit is hard wired, be sure the power to the unit is off
- Always follow OSHA electrical lockout safety requirements to prevent accidental release of energy during service or maintenance activities
- **NEVER** attempt to check operation of the PCO-A Cell Assembly by direct observation; severe eye damage can result; check the indicator light on the front face of the unit, if light is on the Cell is operating


Save these instructions.

Product Features

It is important to be familiar with the parts of the activTek Induct 5000+ Ozone or activTek Induct 10000+ Ozone. If any parts are missing, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activtek.net.

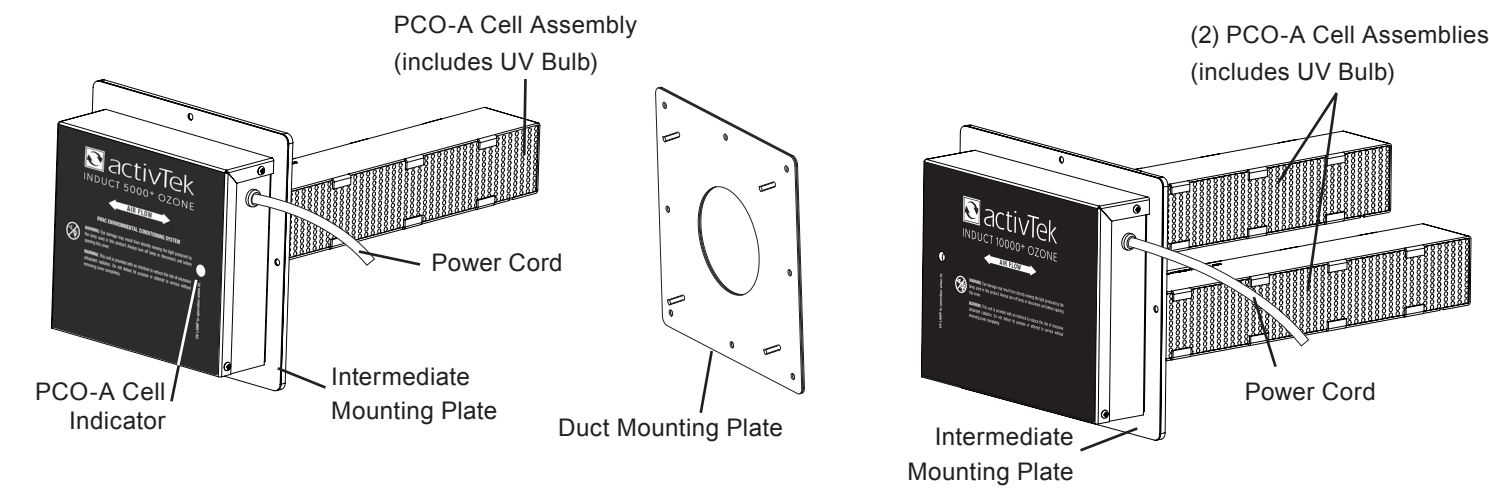

Installation Hardware (supplied)

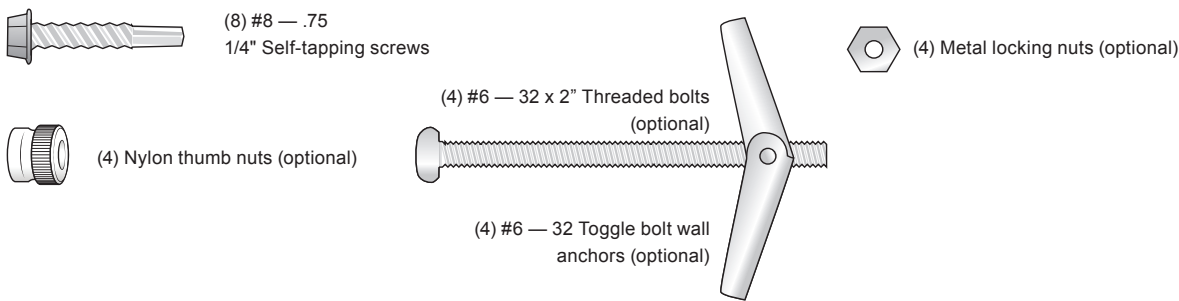


Recommended Installation Tools

CAUTION

When the unit is installed in a roof mounted HVAC system, the unit must be protected from elements.



YOU MAY ALSO NEED:

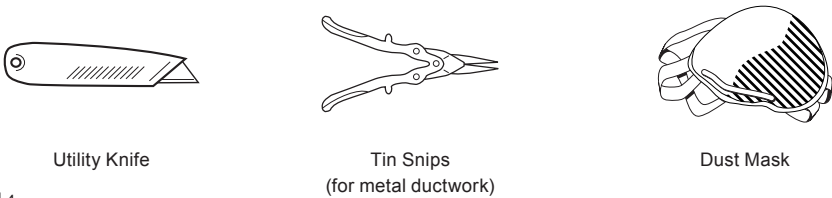

Directions for Use and Installation Requirements



WARNING


If installed near a furnace or where emergency heat coils could raise the temperature inside the plenum, cycle the AC unit through the heating cycles assuring that the temperature never exceeds 200°F (93°C); the activTek® Cell Assembly must not exceed 200°F (93°C).



CAUTION

- This unit must be installed by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- When the unit is installed in a roof mounted HVAC system, the unit must be protected from the elements
- The activTek Induct 5000+ Ozone or activTek Induct 10000+ Ozone require power 24/7; DO NOT install where power to the unit will be cycled on and off

1. The activTek Induct 5000+ Ozone and the activTek Induct 10000+ Ozone units should be installed after the air handler in the HVAC system.
2. The ductwork around the installation area should be clean and dry to ensure proper adhesion of the gasket materials and any tape used.
3. When installing near a furnace or heating coils, run the heating system through the heating cycles to ensure the temperature of the Induct unit does not exceed 200°F.
4. An approximate 3.5" (Induct 5000+) or 4.0" (Induct 10000+) opening will need to be cut into the existing ductwork to install the unit properly.

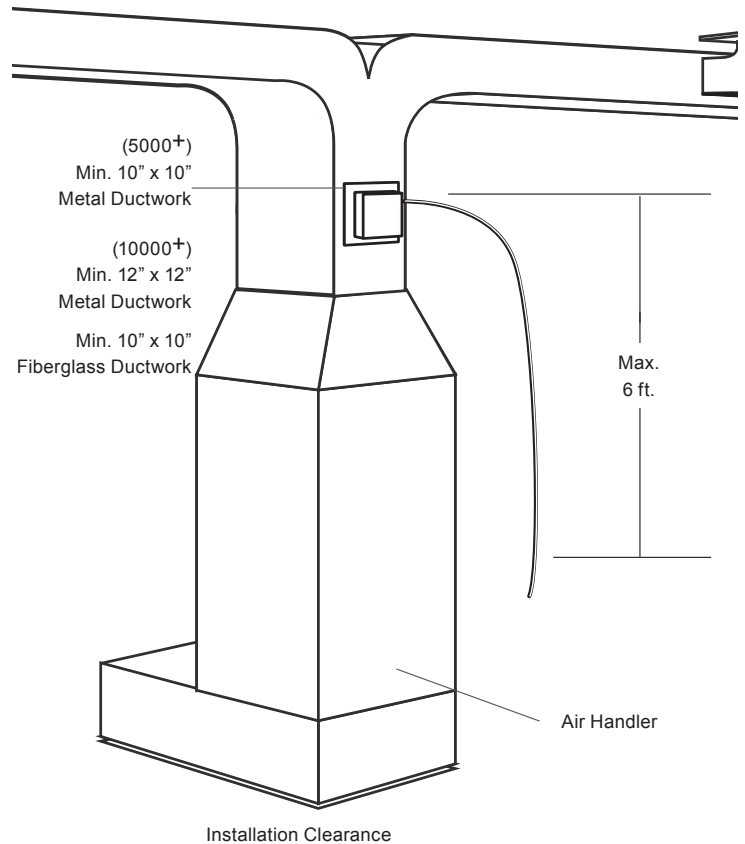

If you have any questions regarding installation requirements, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

Electrical Requirements



- To Reduce the Risk of Electric Shock – DO NOT use in wet or damp locations; this equipment emits UV-C radiation; DO NOT locate equipment in any location allowing direct line-of-sight to vents, returns, or other duct openings; disconnect from supply before servicing or replacing
- These units are equipped with a universal ballast that operates at nominal voltages between 100 and 277 VAC, 50/60 Hz



Wiring of the unit into your HVAC system should be done by a licensed HVAC installer or electrical contractor only

For 120V Domestic Units: Black = L1, White = Neutral, Green = Ground

For 220V Commercial Units: Black = L1, White = L2, Green = Ground

For 230V/240V International Units: Brown = L1, Blue = Neutral, Green w/yellow stripe = Ground

Installing the Unit




To Reduce the Risk of Electric Shock – DO NOT use in wet or damp locations; this equipment emits UV-C radiation; DO NOT locate equipment in any location allowing direct line-of-sight to vents, returns, or other duct openings; Disconnect from supply before servicing or replacing.




- This unit must be installed by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- Hard wiring unit into HVAC system must be done by a licensed HVAC installer or electrical contractor only
- When the unit is installed in a roof mounted HVAC system, the unit must be protected from elements
- The activTek Induct 5000+ Ozone or activTek Induct 10000+ Ozone require power 24/7; DO NOT install where power to the unit will be cycled on and off
- This unit emits ozone; install unit to properly cover the total ventilated indoor area

Installing the Unit (continued)


Find the optimal position downstream from the air handler. Ensure location in duct has enough room for the Duct Mounting Plate. It is recommended for maximum effectiveness that the unit be placed as close to the air handler as possible.

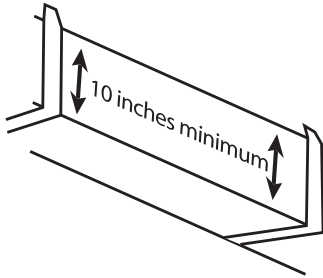


1. Locate a suitable area on the duct for installation.

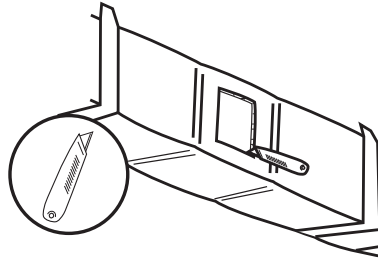

2. Cut away insulation to expose metal duct (if needed).

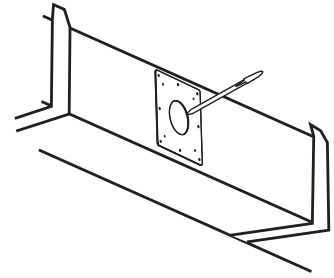


3. Mark location for 3.5" or 4" opening using the Duct Mounting Plate.

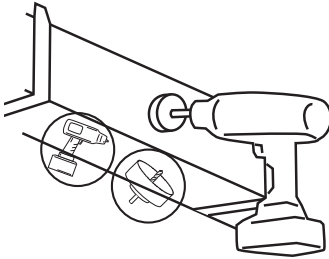

4. Cut a hole in the duct using a 3.5" or 4" hole saw.




5. Remove the adhesive backing from the Duct Mounting Plate.

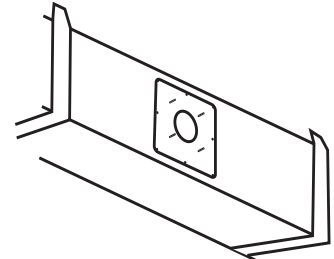


6. Center the openings and press the Duct Mounting Plate onto the duct. The adhesive backing will hold the Mounting Plate in place.


ALTERNATE CUTTING METHOD:

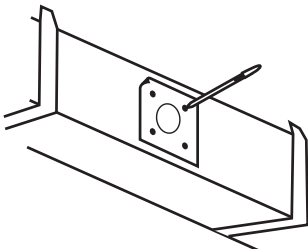

1. Using the Duct Mounting Plate, mark four cutting method holes on the duct.

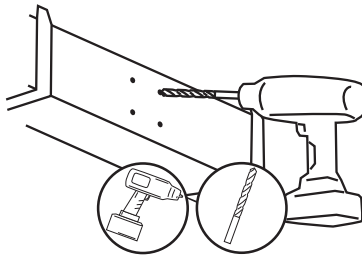


2. Drill four holes where marked.

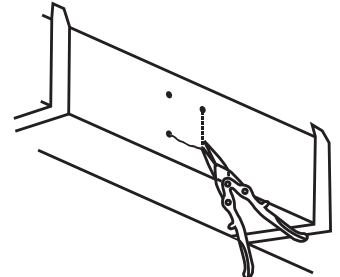


3. Cut between holes using tin snips.

Installing the Unit (continued)

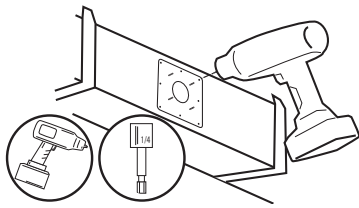


7. Secure the Duct Mounting Plate using (8) #8 self-tapping screws.

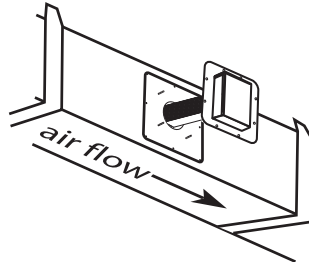


8. Insert the unit into the opening in the Duct. Make sure the air will pass through the PCO-A Cell Assembly Honeycomb matrix.

Vertical Mount Option


If installing in a vertical up flow duct, it may be necessary to rotate the PCO-A Cell Assembly 90 (degrees) to keep the Honeycomb Matrix in the airflow. Use (2) black thumb nuts to secure the PCO-A Cell Assembly onto the unit. (See step #8)

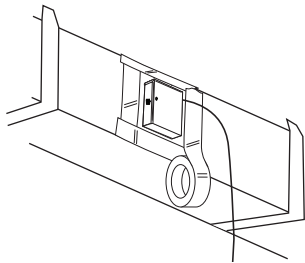

9. Unit may be taped with aluminum HVAC tape to provide complete seal.

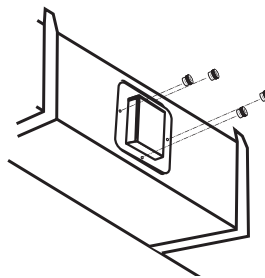


10. Secure the unit to the Duct Mounting Plate with the (4) nylon thumb nuts.

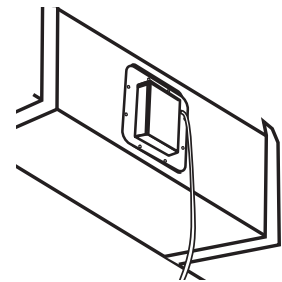


11. Plug the unit into a working power source.


ACTIVTEK INDUCT 10000+ OZONE:

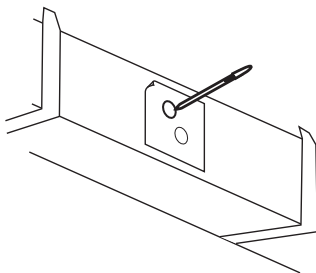


- a. Using the Duct Mounting Plate as a template, mark the location for installation.

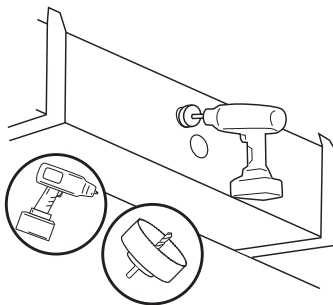

- b. Using a 4" (4 inch) hole saw, cut opening(s) into duct work.

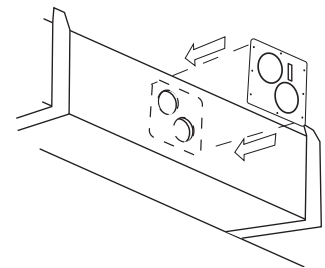

- c. Place the Duct Mounting Plate squarely into place and fasten to the duct with the eight (8) self-tapping screws.

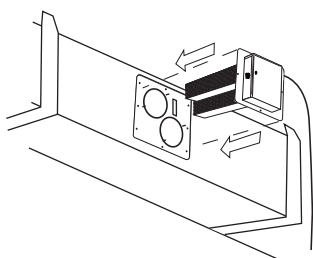

- d. Insert the unit into the openings in the Duct and secure with the four (4) nylon thumb nuts provided.

NOTE: The activTek Induct 5000+ Ozone and activTek Induct 10000+ Ozone require power 24/7. DO NOT install where power to the unit will be recycled on and off.

Wiring the Unit



- To Reduce the Risk of Electric Shock – DO NOT use in wet or damp locations; this equipment emits UV-C radiation; DO NOT locate equipment in any location allowing direct line-of-sight to vents, returns, or other duct openings; disconnect from supply before servicing or replacing
- This unit is equipped with a universal ballast that operates at nominal voltages between 100 and 277 VAC, 50/60 Hz



- Wiring of the unit into your HVAC system should be done by a licensed HVAC installer or electrical contractor only
- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy
- The activTek Induct 5000+ Ozone and activTek Induct 10000+ Ozone are shipped with a blunt cord; if required, installation of a UL approved plug should be done by a qualified electrical contractor
- The activTek Induct 5000+ Ozone and activTek Induct 10000+ Ozone require power 24/7; DO NOT install where power to the unit will be cycled on and off

ELECTRICAL REQUIREMENTS FOR 120 VOLT INSTALLATION ONLY

- To use a 120 volt plug, be sure to locate the unit within 6 ft. of a standard 120 volt grounded outlet. Use of an extension cord is not recommended due to safety considerations.
- Install a US “Type B” UL approved plug onto the blunt cord.

Hardwiring Requirements (All units)


1. Connect wires coming from the activTek Induct 5000+ Ozone and activTek Induct 10000+ Ozone unit as follows:

For 120V Domestic Units: Black = L1, White = Neutral, Green = Ground

For 220V units: Black = L1, White = L2, Green = Ground

For 230V International units: Brown = L1, Blue = Neutral, Green w/yellow stripe = Ground

2. Be sure to ground the Ballast by securing the unit to the metal surface of the AC unit or power box.
3. Check indicator light for proper operation with fan on.

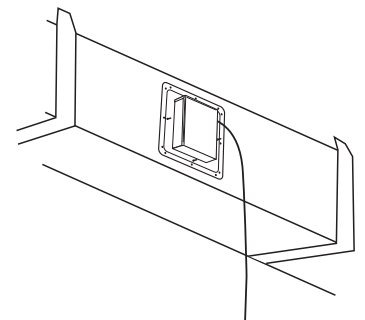

If you have any questions regarding about electrical requirements, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activtek.net.

Maintenance/PCO-A Cell Indicator



For optimal performance and to maintain the Limited 5 year warranty, it is required to replace the PCO-A Cell Assembly once every 12 months, even if the PCO-A Cell appears to be operating normally.

Your activTek Induct 5000+ Ozone and activTek Induct 10000+ Ozone unit require no periodic maintenance beyond normal replacement of the PCO-A Cell Assembly once every 12 months. See full details in Warranty section on Page 17.

The PCO-A Cell Indicator on the face of the unit will glow when the PCO-A is in use. If the indicator does not glow and the unit has power, the PCO-A Cell Assembly should be replaced.




Replacing the PCO-A Cell Assembly




- UV Light in operation; disconnect unit from its power source before servicing; failure to follow warnings may result in severe eye damage
- If the unit is hard wired, be sure the power to the unit is off
- Always follow OSHA electrical lockout safety requirements to prevent accidental release of energy during service or maintenance activities




- For optimal performance and to maintain the Limited 5 year warranty, it is required to replace the PCO-A Cell Assembly once every 12 months, even if the PCO-A Cell appears to be operating normally
- This unit must be serviced by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- Use genuine activTek replacement parts only; parts from anyone other than an authorized activTek representative may damage your unit and void your warranty

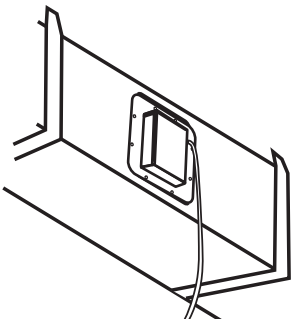

1. Disconnect (unplug) the Power Cord from its power source.

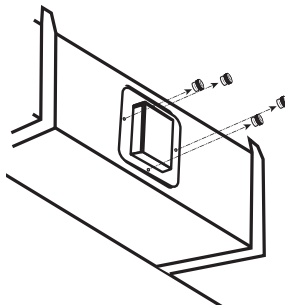


2. Remove the four (4) nylon thumb nuts securing the unit to the Duct Mounting Plate.

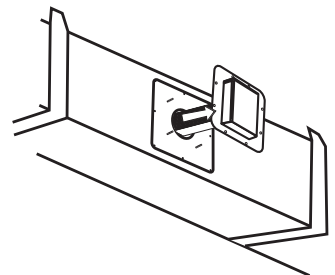


3. Remove the unit from the Duct Mounting Plate.


Replacing the PCO-A Cell Assembly (continued)

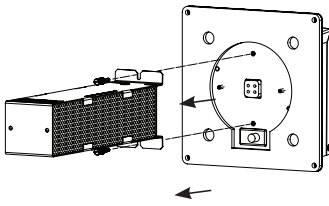


4. Remove the two (2) thumb screws holding the PCO-A Cell Assembly to the unit.

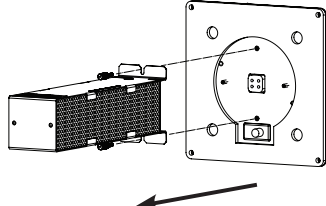


5. Remove the used PCO-A Cell Assembly from the base unit and dispose of the Cell Assembly properly.

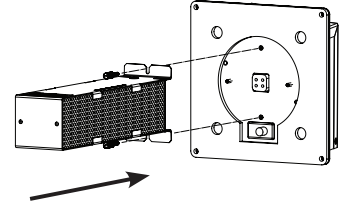


6. Plug the new PCO-A Cell Assembly into the base unit. Make sure Air Flow is passing through the Honeycomb Cell.

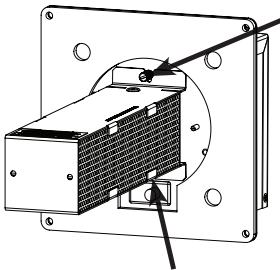


7. Secure the PCO-A Cell Assembly with (2) thumb screws.

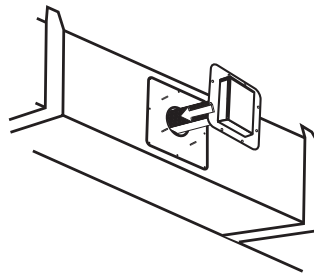

8. Insert the unit into the Duct Mounting Plate.

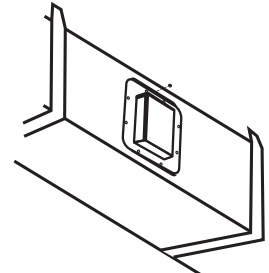


9. Secure the unit onto the Duct Mounting Plate with four (4) nylon thumb nuts.

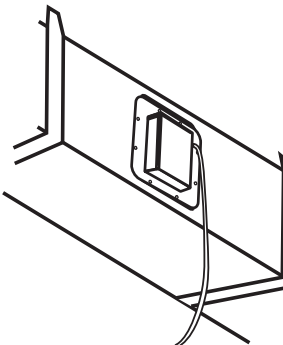


10. Reconnect the Power Cord to its power source.

Replacing the PCO-A Cell Assembly (continued)



ACTIVTEK INDUCT 10000+ OZONE:

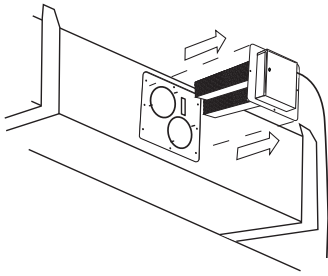

- a. Remove the activTek Induct 10000+ Ozone by removing the four (4) nylon thumb nuts and sliding the unit out.

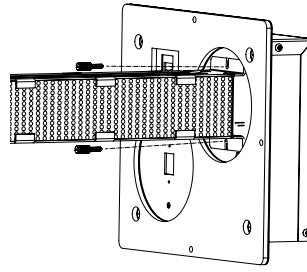

- b. Remove the thumb screws on either side of the PCO-A Cell Assembly to remove the Cell Assembly from the unit.

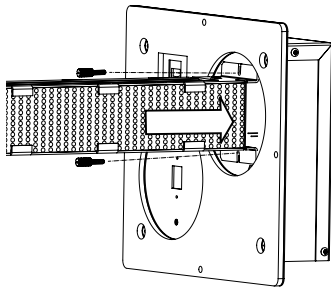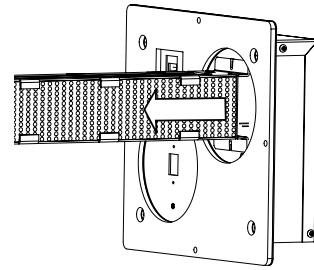

- c. Replace the PCO-A Cell Assembly by reversing steps a-c.



Visit lamprecycle.org for proper bulb disposal regulations

For questions about the maintenance or service of this unit, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

Replacing the Ballast




- **NEVER** attempt to check operation of the activTek® Cell Assemblies by direct observation; severe eye damage can result; use the indicator light on the bottom of the ballast only
- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy; release of energy during service or maintenance activities

Replacing the Ballast (continued)



CAUTION

- This unit must be serviced by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- Use genuine activTek replacement parts only; parts from anyone other than an authorized activTek representative may damage your unit and void your warranty

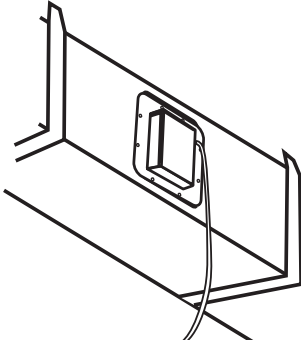


1. Disconnect (unplug) the Power Cord from its power source.




2. Open the Cover of the unit by removing the four (4) thumb screws then remove the Cover.


NOTE: The screws are under the face plate label indicated by the small "X".

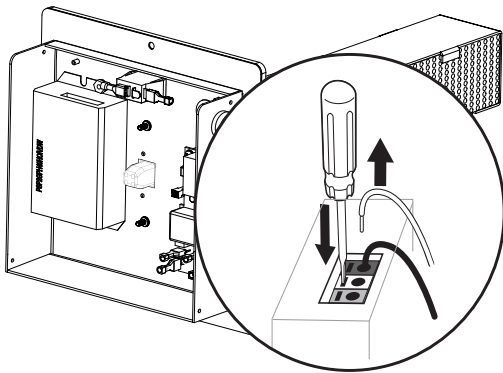

3. Disconnect all Ballast wiring by pressing down on the connector tabs and pulling wire straight out.

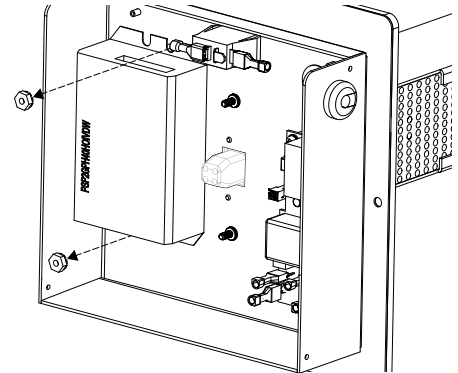

4. Remove the two (2) nuts securing the Ballast to the case.

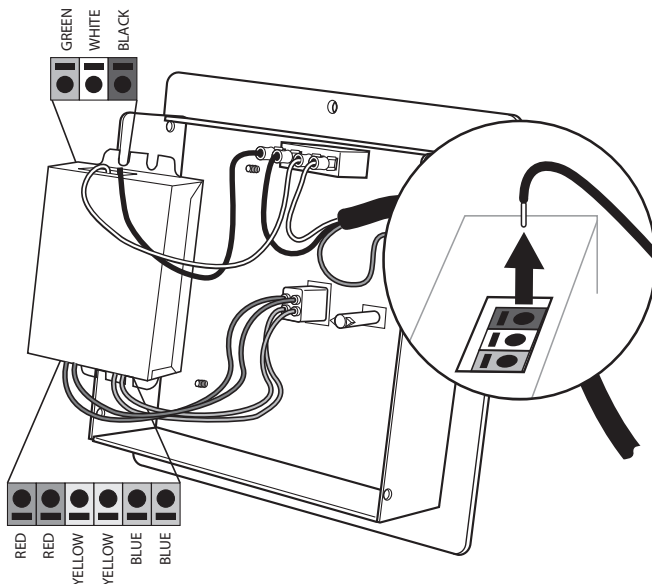


UPPER (3 terminals)

- Black power wire in **BLACK**
- White power wire in **WHITE**
- **GREEN** is not used


LOWER (6 terminals)

- 2 Red wires in **RED**
- 2 Blue wires in **BLUE**
(INDUCT 10000+ ONLY)
- 2 Yellow wires in **YELLOW**


Replacing the Ballast (continued)

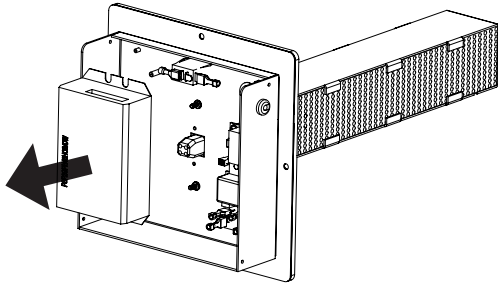

5. Remove the Ballast from the unit.

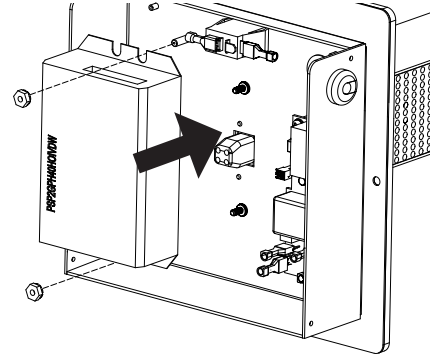


6. Place new Ballast into original location and secure using the two (2) nuts removed in step 4.

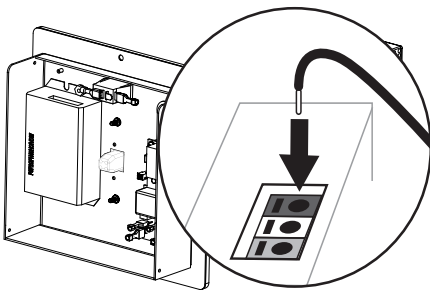

7. To reconnect wiring, insert wire into wire pocket in Ballast until bottomed. Gently pull the wire to ensure it is properly connected.



8. Replace the Cover of the unit by and insert the four (4) thumb screws.

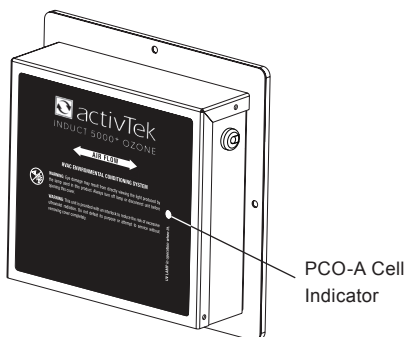

9. Re-install the unit if removed from the duct. Reconnect the Power Cord to its power source and check for proper operation.

NOTE: PCO-A Cell Indicator should be lit when in operation.

For questions about the maintenance procedures, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

Troubleshooting



WARNING


- UV Light in operation; disconnect unit from its power source before servicing; failure to follow warnings may result in severe eye damage
- Live voltage may be present
- Always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy



CAUTION

This unit must be installed and serviced by a licensed HVAC contractor or electrician. Failure to do so will void the warranty of the product.

1. Check the continuity of the UV Bulb filaments with a Multimeter by placing the Multimeter probes on the UV Bulb pins that are closest to each other. The Multimeter should beep if the filaments are not broken. Resistance can also be checked if continuity is not available on the Multimeter. Resistance should be between 3 – 5 ohms. If continuity or resistance check is bad, replace the PCO-A Cell Assembly.
2. If continuity or resistance check is good, replace the Ballast. To replace the Ballast follow the steps on pages 13-14.

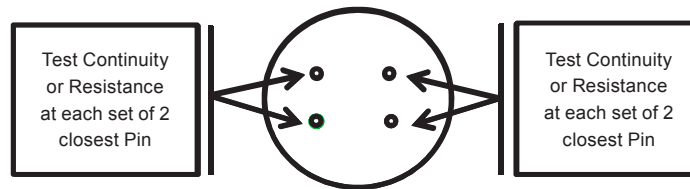

For questions on troubleshooting , please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

Replacement Parts




CAUTION


Use genuine activTek replacement parts only; parts from anyone other than an authorized activTek representative may damage your unit and void your warranty.

REPLACEMENT PARTS	PART NUMBER
PCO-A Cell Assembly - (1) 14" Cell Assembly (O ₃) Not available in California or Canada. NOTE: Two (2) PCO-A Cell Assemblies are needed for the activTek Induct 10000+ Ozone.	9950232
Ballast	9950102

activTek Induct 5000+ Ozone

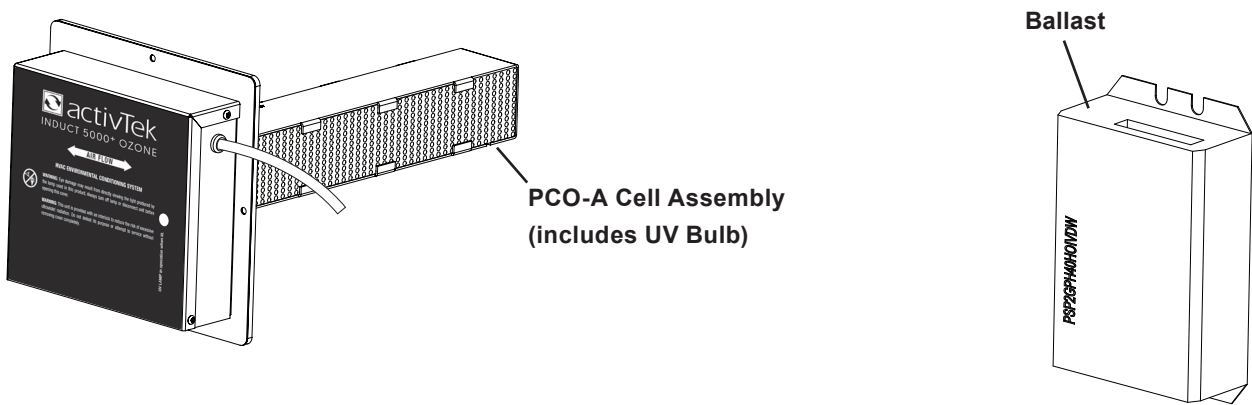

activTek Induct 10000+ Ozone

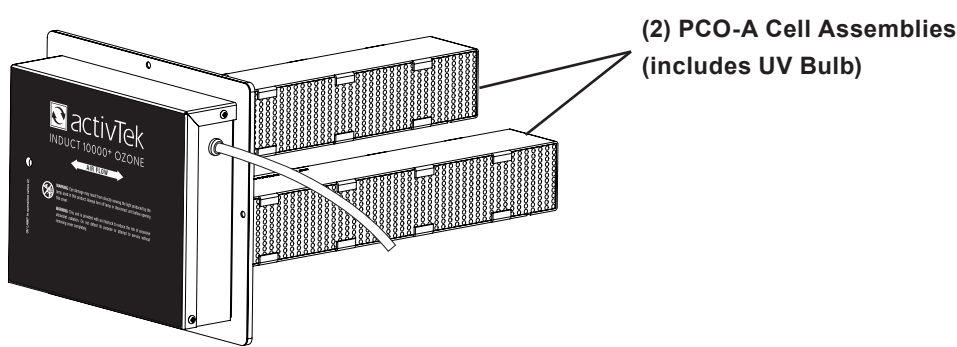

To order replacement parts, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

Warranty Information

Limited Five (5) Year Warranty

To register your activTek Induct 5000+ Ozone or 10000+ Ozone unit, please contact Customer Service at 866.736.0503 or email support@activTek.net.

Customer should not repackage and ship the activTek Induct 5000+ Ozone or 10000+ Ozone units due to possibility of irreparable damage. For questions on warranty service, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net.

WHAT IS COVERED BY THIS WARRANTY

We warrant the activTek Induct 5000+ Ozone or 10000+ Ozone units to the customer, subject to the conditions below, against defects in workmanship or material, provided that the products are returned to a service location within the following time periods:

- activTek Induct 5000+ Ozone or 10000+ Ozone (excluding the PCO-A Cell Assembly) within five (5) years of date of purchase
- PCO-A Cell Assembly within 12 months of date of purchase if the activTek Induct 5000+ Ozone or 10000+ Ozone is connected to a power source where the PCO-A Cell Assembly is "ON" 100% of the time; If the activTek Induct 5000+ Ozone or 10000+ Ozone is connected to the fan circuit where the PCO-A Cell Assembly cycles "ON and OFF" with the system fan, the PCO-A Cell Assembly is only covered by a ninety (90) day warranty from date of purchase

INSTALLATION AND MAINTENANCE REQUIREMENTS

This warranty is expressly conditioned upon proper installation, operation, cleaning and maintenance, all in accordance with the Owner's Manual. Failure to meet any of these requirements will void this warranty. Servicing of your activTek Induct 5000+ Ozone or 10000+ Ozone by parties other than an authorized activTek Representative and/or using parts other than genuine parts will also void this warranty.

This warranty is contingent upon:

- Registration of the product through the approved methods listed above
- Replacing the PCO-A Cell Assembly once every 12 months with a genuine activTek part (proof of change required)

HOW TO OBTAIN WARRANTY SERVICE

Customer must register their product by contacting Customer Service at 866.736.0503 or email support@activTek.net and provide proof of purchase (including purchase date) within the above time periods. We will repair or replace and return the product, without charge and within a reasonable period of time, subject to the conditions herein, if its examination shall disclose any part to be defective in workmanship or material. If we, in our discretion, are unable to repair the product after a reasonable number of attempts, we will provide either a refund of the purchase price or a replacement unit, at the company's option. We reserve the right to inspect and/or require confirmation of installation method.

WHAT IS NOT COVERED BY THIS WARRANTY

Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply to loss or damage caused by accident, fire, abuse, misuse, improper installation, leaking, modification, misapplication, failure to maintain

the product as provided herein, or by any repairs other than those provided by our authorized activTek location. This warranty is non-transferable.

UNAUTHORIZED CHANNELS & MISSING SERIAL NUMBERS

If a valid serial number is missing from the product, the warranty will be voided. activTek products are authorized for sale through authorized Sales Representatives only. Warranties are voided if a product is purchased through unauthorized channels; this includes websites that are not authorized to use activTek's trademarked names, images and logos as well as Internet auction sites (e.g. eBay and Craigslist). The only approved Internet presence for activTek products is activTek.net. To confirm warranty coverage prior to purchasing a product, please contact your Sales Representative or Customer Service at 866.736.0503 or email support@activTek.net with the serial number located on the unit.

EXCLUSION OF OTHER WARRANTIES AND CONDITIONS

EXCEPT AS PROVIDED HEREIN, AND TO THE EXTENT CONSISTENT WITH APPLICABLE LAWS, WE MAKE NO REPRESENTATION OR WARRANTY OF ANY KIND. ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES

TO THE EXTENT CONSISTENT WITH APPLICABLE LAWS, WE SHALL NOT IN ANY CASE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF EXPRESSED OR IMPLIED WARRANTIES, CONDITIONS, GUARANTEES OR REPRESENTATIONS, BREACH OF CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY. Such excluded damages include, but are not limited to, loss of profits or revenue, and loss of the use of the products, and any loss caused by leaks or other water damage.

FOR U.S. APPLICATION ONLY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on warranties, or on remedies for breach. In such states, the above limitations may not apply to you.

This warranty is provided by:

activTek Environmental, LLC
1300 Valley Drive
Bristol, VA 24201

SERVICE

Every effort is made to ensure customers receive an up-to-date owner's manual on the use of our products; however, from time to time, modifications to our products may without notice make the information contained herein subject to alteration. For the latest information, please view the owner's manual at activTek.net/manuals.

FCC Declaration & Responsible Party

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant of Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the Independent Contractor for help.

FCC DECLARATION OF CONFORMITY

Name: activTek Induct 5000+ Ozone
activTek Induct 10000+ Ozone

Model: A1024E (5000+)
A1025C (10000+)

Produced for: activTek Environmental, LLC
This device complies with Part 15 of the FCC Rules.

RESPONSIBLE PARTY

activTek Environmental, LLC
1300 Valley Drive
Bristol, VA 24201
Ph: 866.736.0503

Signature: 

Printed Name: Andrew Eide
Title: Chief Technology, Product & Regulatory Officer
Date: 04/17/2026

For information regarding the use of this product, please contact Customer Service at 866.736.0503 or email support@activTek.net

ACTIVTEK.NET

© 2026 activTek Environmental, LLC. All Rights Reserved

